





## Sealmac® Dam Lining System Installation Guide

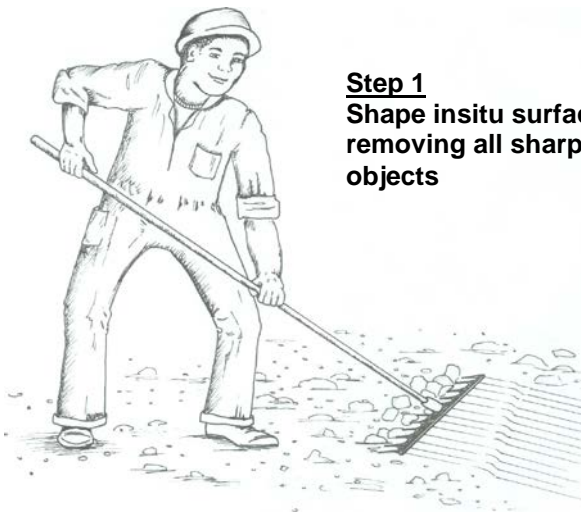

**Step 1**  
Shape insitu surface removing all sharp objects



**Step 2**  
Remove all vegetation

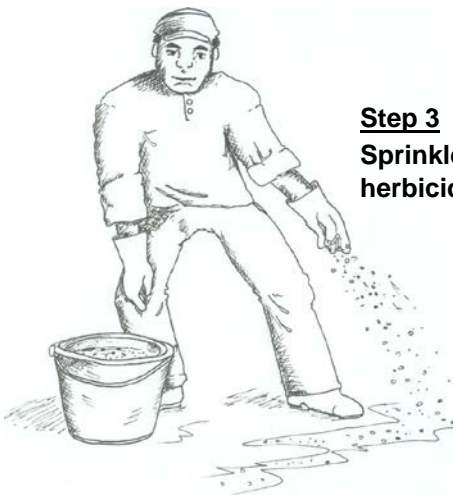


**Step 3**  
Sprinkle a slow-release herbicide



**Step 4**  
Excavate a 300 x 300 anchor trench around the perimeter

**Step 5**  
Lay Sealmac® covering entire area and overlapping edges by 150mm coat over all joints. Fill anchor trench halfway.

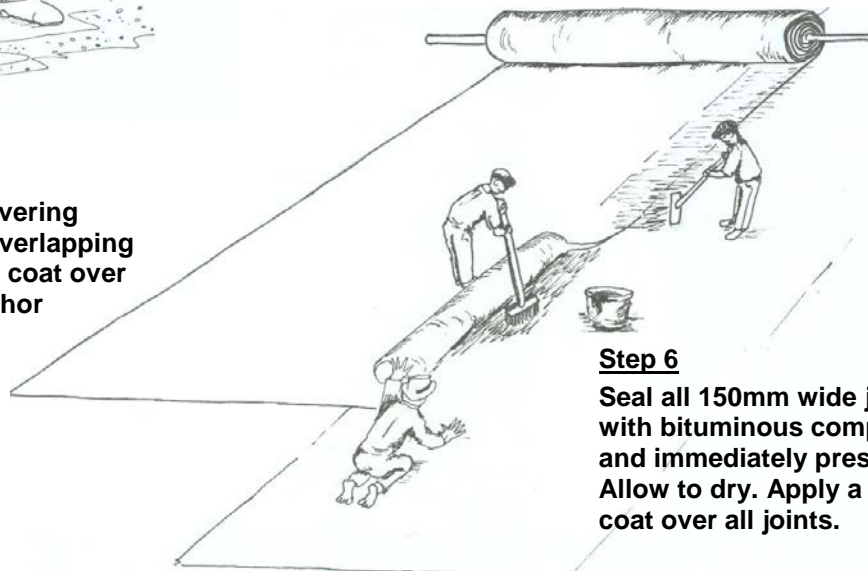

**Step 6**  
Seal all 150mm wide joints with bituminous compound and immediately press down. Allow to dry. Apply a second coat over all joints.

**Step 7**

Mix saturation first coat 1:1 compound with water



Stir well



**Step 8**

- Apply saturation coat of sealing compound at 1.6 l/m<sup>2</sup> total.
- Allow 4 to 8 hours to dry.


**Step 9**

- Apply first coat undiluted sealing compound at 1.0 l/m<sup>2</sup>.
- Allow 4 to 8 hours to dry.

**Step 10**

- Apply second coat undiluted sealing compound at 1.0 l/m<sup>2</sup>.
- Allow 72 hour to cure
- Fill anchor trenches

Easily flashed to structural elements

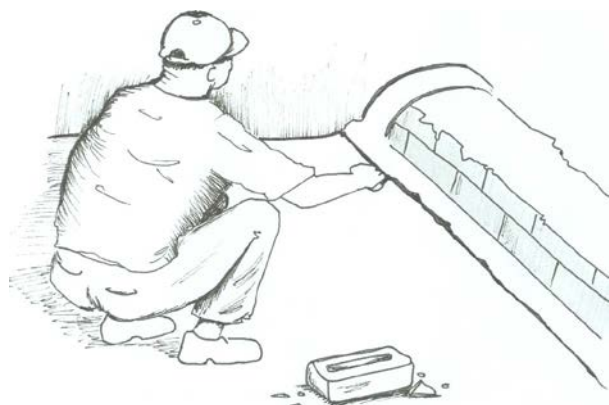

Tools easily cleaned :

- Wet - water
- Dry - paraffin